

ANAN-7000DLE DISASSEMBLY MANUAL



STEP 1.

Unscrew 6 nos. of screws from base of the extrusion to unfix the base plate.



STEP 2.

Unscrew 6 nos. of screws from front plate and pull out from extrusion.




STEP 3.

Pull out the power switch as shown in picture.




STEP 4.

Unassemble nuts and washers from BNC connectors then unscrew 6 nos. of screws from back plate and pull out from extrusion.

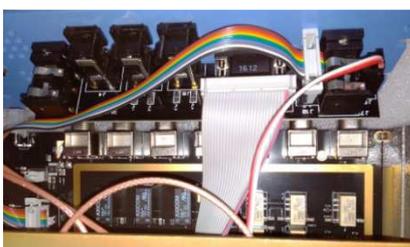


STEP 5.

Disconnect 3 nos. of cable from Spreadout card and 2 SMA cables XVTR & 10MHz IN mounted on back plate.

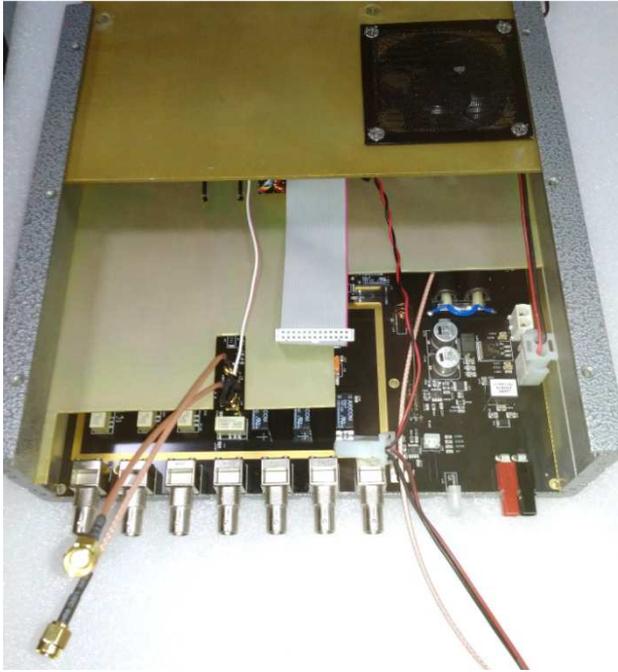

STEP 6.

Push base plate and disconnect fan power cable from J8 (PA).

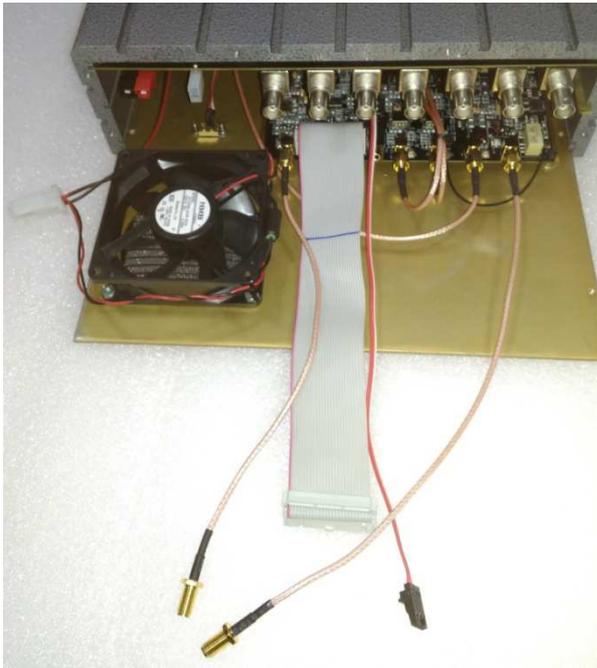


STEP 7.

From other side of radio, disconnect all SMA cables from MKII card.




STEP 8.

From other side of radio, disconnect color ribbon cable J15 (MKII)

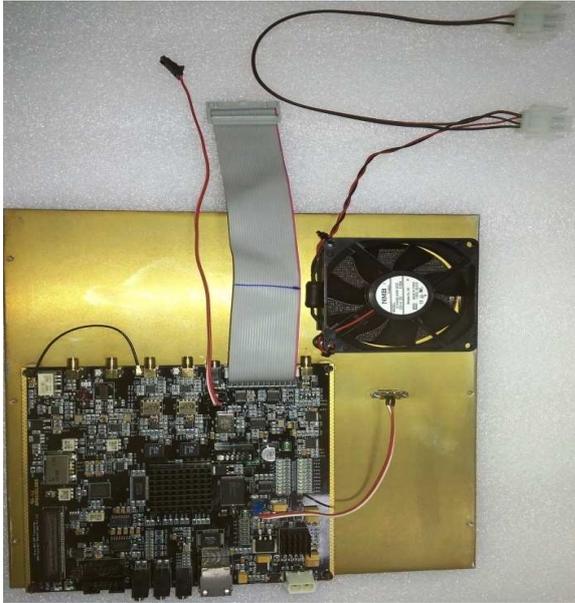


STEP 9.

Disconnect all other cables from MKII card.

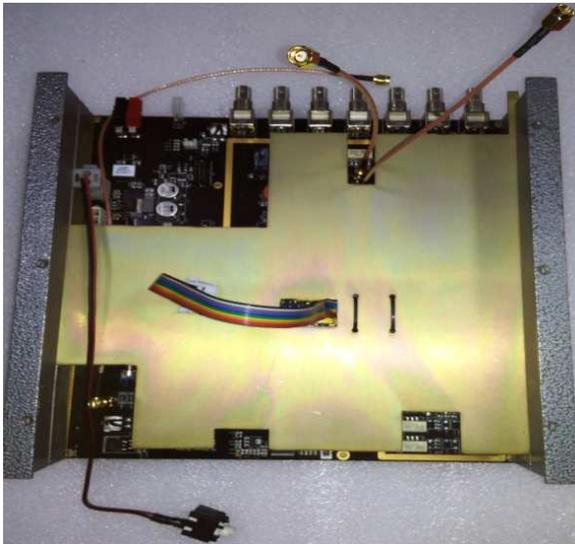

STEP 10.

Pull centre Plate from extrusion.

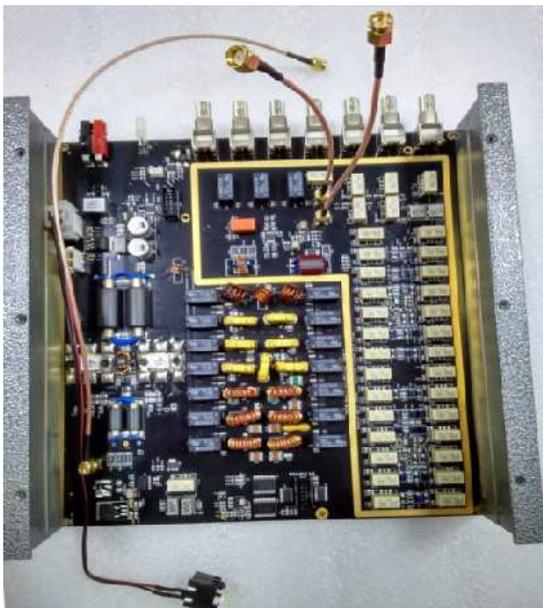

STEP 11.

Disconnect all other cables from PA card.